



# Thank you

for downloading this pdf file from [Knitting-and.com](http://Knitting-and.com)!

Your visits have helped keep Knitting-and.com online, providing free crafts and recipes since 1996.

There are hundreds of free patterns and crafts available and more added all the time!

**Note:** The pink watermark on the following pages will not show if you print this file.

# Singercraft Guide.

## INSTRUCTIONS TO REMOVE AND ATTACH THE KNIFE

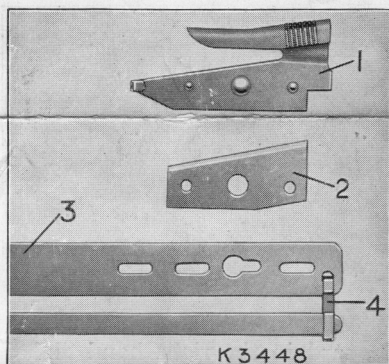


Fig. 1

1. Knife Guard
2. Knife
3. Frame
4. Spacing Piece


 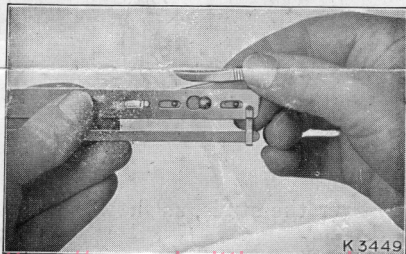


Fig. 2

### To remove the knife and guard

Hold frame in left hand, as illustrated, and, with the thumb and forefinger of the right hand, grasp the knife guard at its serrated part and push to the left.

## To attach the knife



K 3450

Fig. 3

Attach knife to guard, as illustrated.

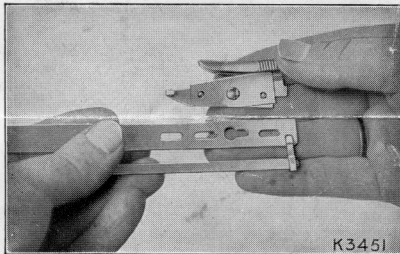


Fig. 4

Hold knife and guard in the right hand and the frame in the left hand, in the manner illustrated above.

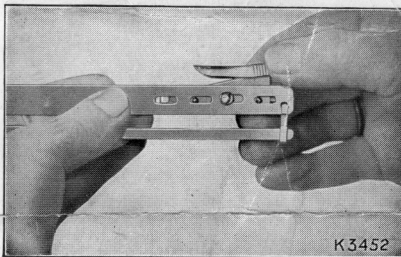


Fig. 5

Place the frame over the studs, as shown in Fig. 5, and pull guard to the right.